

The image shows the user manual for the VIKO by Panasonic Karre Music Publish Switch. It consists of five pages: Page 1 features the VIKO logo and product name; Page 2 shows assembly details; Page 3 illustrates connection diagrams; Page 4 details technical features and warranty conditions; and Page 5 contains a warning section and the company's contact information.

The image shows the user manual for the VIKO by Panasonic Loudspeaker Switch. It includes sections for assembly, connection diagram, technical specifications, warranty conditions, and a warning. The manual also features the VIKO logo and contact information for Panasonic.