



## WRKT4200J5NC KNX SECURE I/O MODULE 22 DRY-IN / 2 VOL-IN / 14 RELAY-OUT IO200-S

WRKT4200J5NC



Installation should only be carried out by a technical personnel having certificate of competency

# Panasonic

Panasonic Electric Works Elektrik San.ve Tic. A.Ş.  
Abdurrahmangazi Mah. Ebubekir Cad. No: 44  
34887 Sancaktepe / İstanbul / Turkey  
T: 0(216) 564 55 55 F: 0(216) 564 55 44

**HOTLINE**  
**444 8456**  
ewtr.panasonic.com  
info@tr.panasonic.com

611075-KNX-EN

### General Information


Panasonic KNX I/O Module is an input and output device designed to fulfil the automation requirements of residential and commercial KNX projects. It comes with KNX Data Secure feature which assures secure data communication on twisted pair bus line for the compatible devices. Panasonic KNX I/O Module can be used to connect conventional switches and binary sensors (e.g. presence detector, card holder etc.) to the KNX bus. Feedback LEDs in conventional switches can also be connected, thanks to its configurable inputs which can be used to drive feedback LEDs as well. Panasonic KNX I/O Module has competent control features such as Lighting, Heating, Shutter and Fan Coil. The current status of the input and output signals can be visualized on the device with its status LEDs. Signals can be manually overridden using the device's manual control button. Many complex configurations and various scenarios can be realized, thanks to the powerful auxiliary functions (i.e. logic, converter and sequence functions, etc.).

### Main Features

- KNX Data Security
- Manual Control
- Switching (Lighting / Heating)
- Shutter / Blind Control (AC / DC)
- Fan Coil (2 pipe / 4 pipe)
- Dry Contact Inputs (Switch-Sensor, Push Button, Card Holder, Feedback LED)
- Wide Range Voltage Inputs (10-230V)
- Auxiliary Functions (Sequencer, Counter, Scene Actuator, Filter, Converter, Logic Gate, Presence Detector Controller, Staircase Controller)

### Product Components

- 1- 16-A Outputs, 2- Dry Contact Inputs, 3- Status LEDs, 4- Manual Operation Buttons, 5- Sensor Input, 6- KNX Programming Button and LED, 7- KNX Bus Terminal, 8- 10-230V AC/DC Inputs

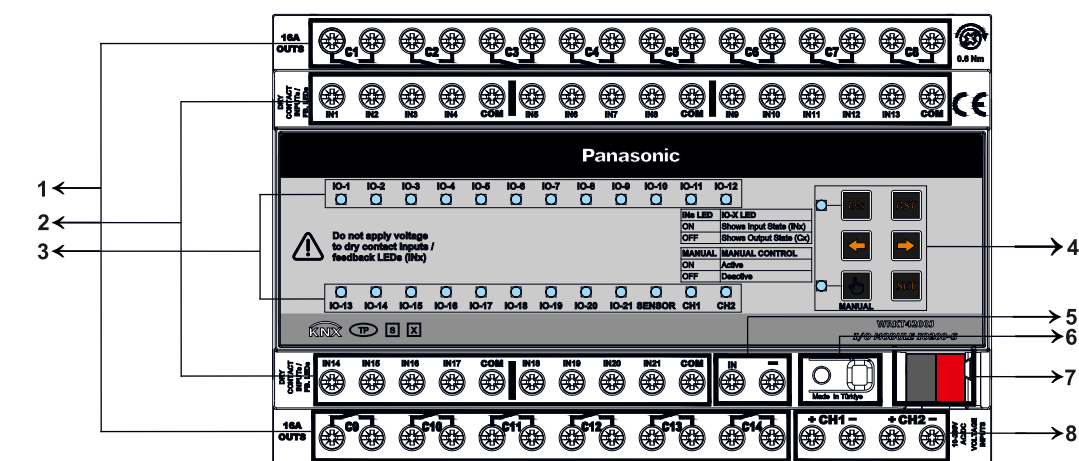

1

2

3

4

5

### Technical Data

Power	
Operating Voltage	DC 21-32 V (from KNX bus)
Current Consumption	Max. 40mA

Environmental Conditions	
Ambient temperature	-5 C ... +45 °C
Storage temperature	-10 C ... +55 °C
Ambient humidity	5 ... 93% (non-condensing)

Housing	
Dimensions (HxWxD)	90mmx143,8mmx65,8mm
Mounting (IEC60715)	35 mm top-hat rail (TH35)
Mounting width	DIN rail 144mm (8 modules)
KNX bus connection	KNX connector (243-211 Wago)
Input/Output connector	60x Screw Terminal
Weight	533,35 g

Input / Output	
Outputs	14ch 16A latching type relay
Inputs	21Ch dry contact input (Configurable as feedback LED) 2 Ch voltage input (10-230V AC/DC) 1Ch sensor input

Electrical safety	
Protection type (IEC60529)	IP 20
Pollution degree (IEC60664)	2
Protection class (IEC61140)	II
Overvoltage category (IEC60664)	III

CE Marking / Standard	
EMC	EN 60669-2-1
LVD	EN 60669-2-1
KNX	EN 50090

### KNX Secure

KNX Secure, protects KNX devices against unwanted access and manipulation. A device with the KNX Secure feature transmits telegrams sent to the KNX bus line in a secure and encrypted manner.

**Panasonic**

Model No: WRKTxxxx  
ACFQAA-AAAIB  
GESKCO-DBYZTA  
JZHD2T-ZVMEAT

Serial No: 008B00000000


Two removable labels with a device certificate come with the product. One of the labels is on the product and the other is inside the box. Installation of the product can be done via ETS using the device certificate.

Keep the removable labels with the device certificate in a safe place.



### Connections

#### Dry Contact Connection

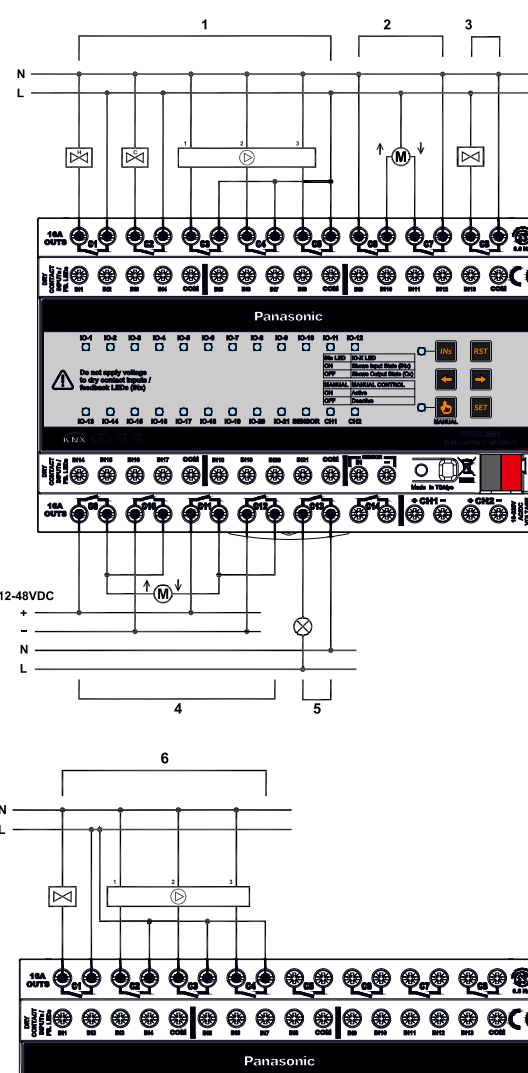

#### 1- Fan Coil (Heating and Cooling)

4 Pipe uses 5 output channels. Channel 1 to Channel 5 are used for fan coil. Channel 1 uses for heating, Channel 2 uses for cooling, Channel 3, Channel 4 and Channel 5 uses for fan steps.

#### 2- Shutter/Blind

Channel 6 and Channel 7 are used for shutter/blind connection.

#### 3- Heating

Channel 8 is used for heating function.

NOTE: For the outputs use circuit breakers for the respective rated current.

#### 4- Shutter/Blind DC

4 output channels are used. Channel 9 to Channel 12 are used for shutter/blind DC connection.

\*To avoid short circuit, make sure that the ETS configuration of the channels which connected to the DC motor are done correctly.

\*Fuse or short circuit protection should be used with DC power supply.


#### 5. Switching

Channel 13 is used for switching – lighting function.


#### 6. Fan Coil (Heating and Cooling)

2 Pipe uses 4 output channels. Channel 1 to Channel 4 are used for fan coil. Channel 1 uses for heating or cooling, Channel 2, Channel 3 and Channel 3 uses for fan step.

### 10-230V AC-DC Connection

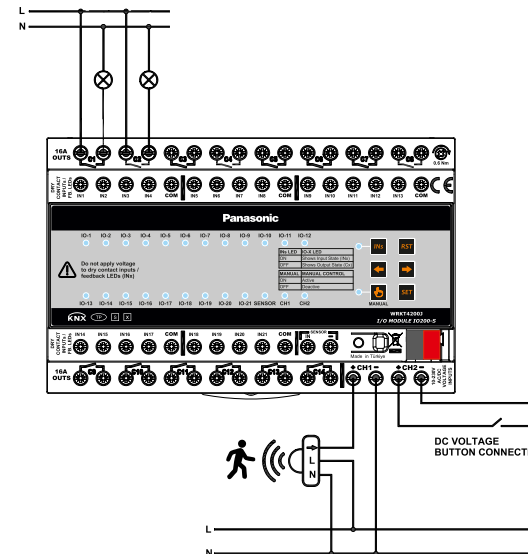

### Dimensions

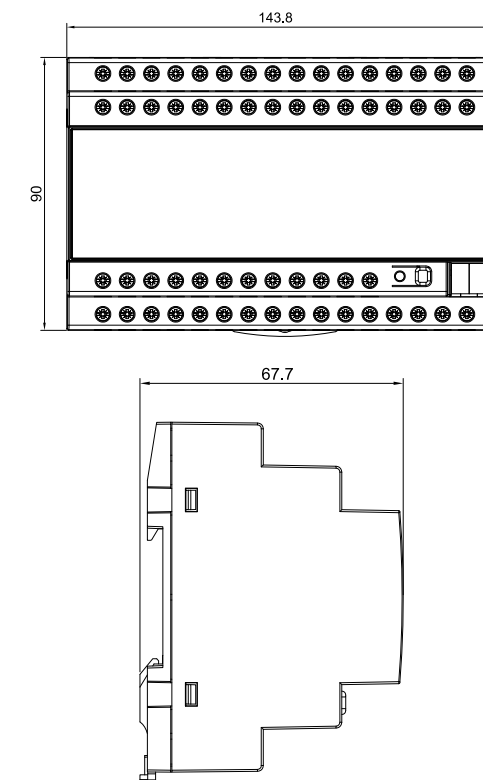

### Device Behavior

#### Factory Default

In the delivery state, manual control (see below) is enabled with some restrictions to test the wiring. Only one channel can be set at a certain time to protect the connected equipment (e.g., Shutter/Blind). KNX socket must be connected to power up the device. Non restricted manual control is available after ETS programming.

#### After ETS Programming

User can define the device behavior and connect it to other KNX devices after programming the device by ETS. The behavior of the device after programming with the ETS depends on the configuration. The description of the features, parameters and objects is in the device reference manual.

#### Manual Control

To enter the manual control mode, press button. An output's LED will start to indicate that the manual control is operated on that input. Press **INS** button to change manual control from Relay Outputs to Dry Contact Inputs. Press **SET** or **RST** buttons to simulate setting or resetting an input/output signal. Press button to exit the manual control mode.

### NOTES

- Protect the device by using a circuit breaker at the declared current values at the relay outputs.
- Do not disassemble, repair or modify this device.
- For mounting use an appropriate equipment according to IEC60715.
- Installation only on a 35 mm DIN rail (TH35).
- Installation only in distribution boards and enclosed housings.
- When the product is to no longer be used, it must not be left in place and it must be removed.

### WARNING

- Ensure that the power is cut off before the assembly of the products.
- Connection and assembly of the electrical devices should be carried out only by the technical personnel having certificate of competency.
- No responsibility is assumed for the entire of the malfunction, accident and loss arising from the assembly or interference of the persons not having the competency certificate.
- Use dry or slightly damp cloth to clean the buttons, cover and frame of the product. Never use alcohol, cologne, detergent or other similar chemicals for cleaning. Do not perform wet cleaning do not contact the product with water when the product is energized.
- In case the surface to which the product is connected is dyed, store the product by removing its cover and the frames.
- Keep the product away from the damp or wet environment during the transportation and shipping.
- It is intended for indoor use only.
- When the product is to no longer be used, it must not be left in place and it must be removed.
- Protect the switch contacts with a series-connected miniature circuit-breaker of characteristic B for a max. rated current of 16A.

### Service and Guarantee

- Warranty period starts as of the delivery date of the product and it is 2 years.
- Warranty covers the malfunctions likely to occur due to the manufacturing defects of the product and within the warranty period.
- The product including all of its parts is under warranty as a whole. If the product turns out to be defective, the consumer can use one of the following rights stipulated in Article 11 of Consumer Protection Law no. 6502;
  - a- Withdrawal from the contract
  - b- Demanding discount from sales fee
  - c- Demanding free repair,
  - d- Demanding the replacement of the sold one with a fungible one free from defects.
- In case the consumer chooses the right of free repair among those rights; the dealer is obliged to repair the product or have the product repaired without claiming any fee under the name of replaced part fee, labor cost or for any other reasons. The consumer can also use the right of free repair against the manufacturer or exporter. The dealer, manufacturer and exporter are jointly and severally liable for the usage of this right by the consumer.
- In case the consumer uses the right of free repair and if the product - fails within the warranty period again and - the maximum period required for the repair is exceeded and - Authorized service station, dealer, manufacturer or exporter state that it's not possible to repair the product in a report, the consumer can demand the return of the product fee, fee discount at the ratio of the defect or the replacement with the one free of defects, if possible, from the dealer. The dealer can not reject the demand of the consumer. In case this demand is not met, the dealer, manufacturer and exporter shall jointly and severally be held responsible.
- The repair period of the product can not exceed 20 business days. This period starts on the notification of the failure on the product to the authorized service station or the dealer within the warranty period and from the date of delivery of the product to the authorized service station out of warranty period. In case of not eliminating the product malfunction within 10 business days, manufacturer or importer is obliged to dedicate another product with similar characteristics to the use of the consumer until the completion of the product repair. In case the product fails within the warranty period, elapsed time is added to the warranty period.
- Usage of the product contrary to the rules stipulated in user's manual, operating out of determined voltage, current and environmental conditions, damage on the cable connection due to the user's fault and failure of the product due to the facts arising from the fire, flood, earthquake, lightning and similar disasters are not under warranty.
- The consumer can apply to the arbitration committee for consumers or the consumer court where the consumer operations are made or in the residential area for the disputes to be occurred regarding the usage of the rights arising from the warranty.
- In case the dealer doesn't provide this certificate of warranty, the consumer can apply to the General Directorate of Consumer Protection and Market Surveillance of Ministry of Customs and Trade".